


PARABODY®

WT. STACK SHROUD FOR GS6/GS8

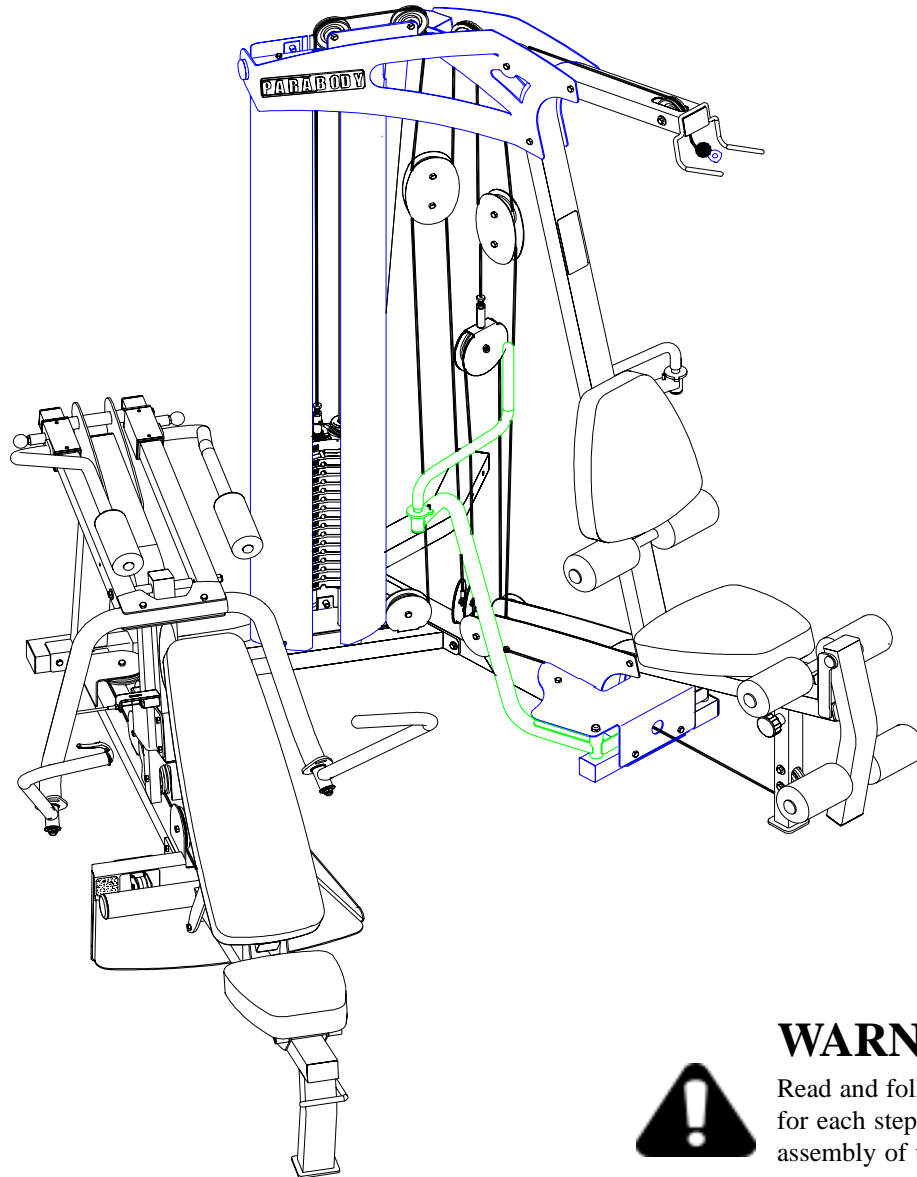

WARNING:

Read and follow all directions for each step to insure proper assembly of this product.



USER'S GUIDE

TABLE OF CONTENTS

Safety Statement.....	2	Assembly Instructions.....	4-5
General Notes.....	3	General Maintenance.....	6
Tools Required.....	3	Warranty Statement.....	7
Parts List.....	4	Product Services.....	8
		Insert-Registration Card	

IMPORTANT SAFETY INFORMATION



THERE IS A RISK ASSUMED BY INDIVIDUALS WHO USE THIS TYPE OF EQUIPMENT. TO MINIMIZE RISK FOLLOW THESE RULES!

1. Before using, read all the warnings and instructions on the use of this machine. Use only for intended exercise. **DO NOT** modify the machine.
2. Obtain a medical exam before beginning any exercise program.
3. Keep body and clothing free of all moving objects.
4. Inspect the machine before use. **DO NOT** use it if it appears damaged. **DO NOT** attempt to fix a broken or jammed machine. Notify your authorized ParaBody dealer before use and have repairs made by an authorized service technician.
5. Be certain that weight pin is completely inserted. Use only the pin provided by the manufacturer. If unsure, call your authorized ParaBody dealer.
6. Never pin the weights or prop plate into an elevated position. **DO NOT** use the machine if found in this condition. **DO NOT** attempt to fix. Notify your authorized ParaBody dealer.
7. Inspect cables and their connections before using machine. Pay particular attention to the cable ends. **DO NOT** attempt to fix. Notify your authorized ParaBody dealer before use and have repairs made by an authorized service technician.
8. Make sure all spring loaded pull pins are fully engaged in the adjustment position and fully tighten thumbscrew before use.
9. Children must not be allowed near this machine. Supervise teenagers.

NOTE: In a continual effort to improve our products, specifications are subject to change
© 2002 Life Fitness, a division of Brunswick Corporation. All rights reserved.
ParaBody is a trademark of Brunswick Corporation

www.parabody.com

IMPORTANT NOTES

Please note:


- * Thank you for purchasing the ParaBody WT. STACK SHROUD FOR GS6/GS8. Please read these instructions thoroughly and keep them for future reference.
- * This product must be assembled on a flat, level surface to assure its proper function. DO NOT securely tighten any frame connections until the entire frame has been assembled, unless otherwise stated.

Tools Required for Assembly


- * 9/16" wrench
- * Ratchet with 9/16" sockets
- * 7/32" Allen wrench

Bolt Length Ruler

NOTE: BOLT LENGTH IS MEASURED FROM THE UNDERSIDE OF THE HEAD OF THE BOLT.

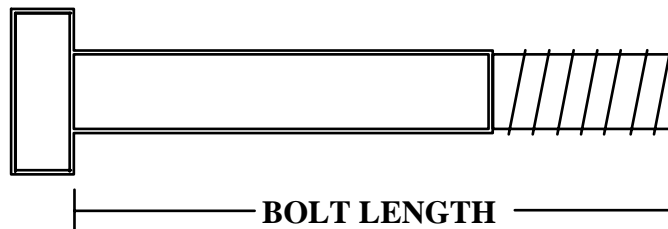


BOLT LENGTH RULER:



PARTS LIST

KEY	PART #	DESCRIPTION	QTY	KEY	PART #	DESCRIPTION	QTY
1	7157409	LEFT SHROUD	1	5	3202401	3/8 X 1" BUTTON HEAD BOLT	8
2	7157509	RIGHT SHROUD	1	6	3228501	3/8" BLACK SAE WASHER	8
3	7114909	TOP SHROUD BRACKET	1	7	3235210	3/8 X 2-1/2" BOLT	2
4	7115009	BOTTOM SHROUD BRACKET	1	8	3114702	3/8" LOCK NUT	2


FIGURE 1

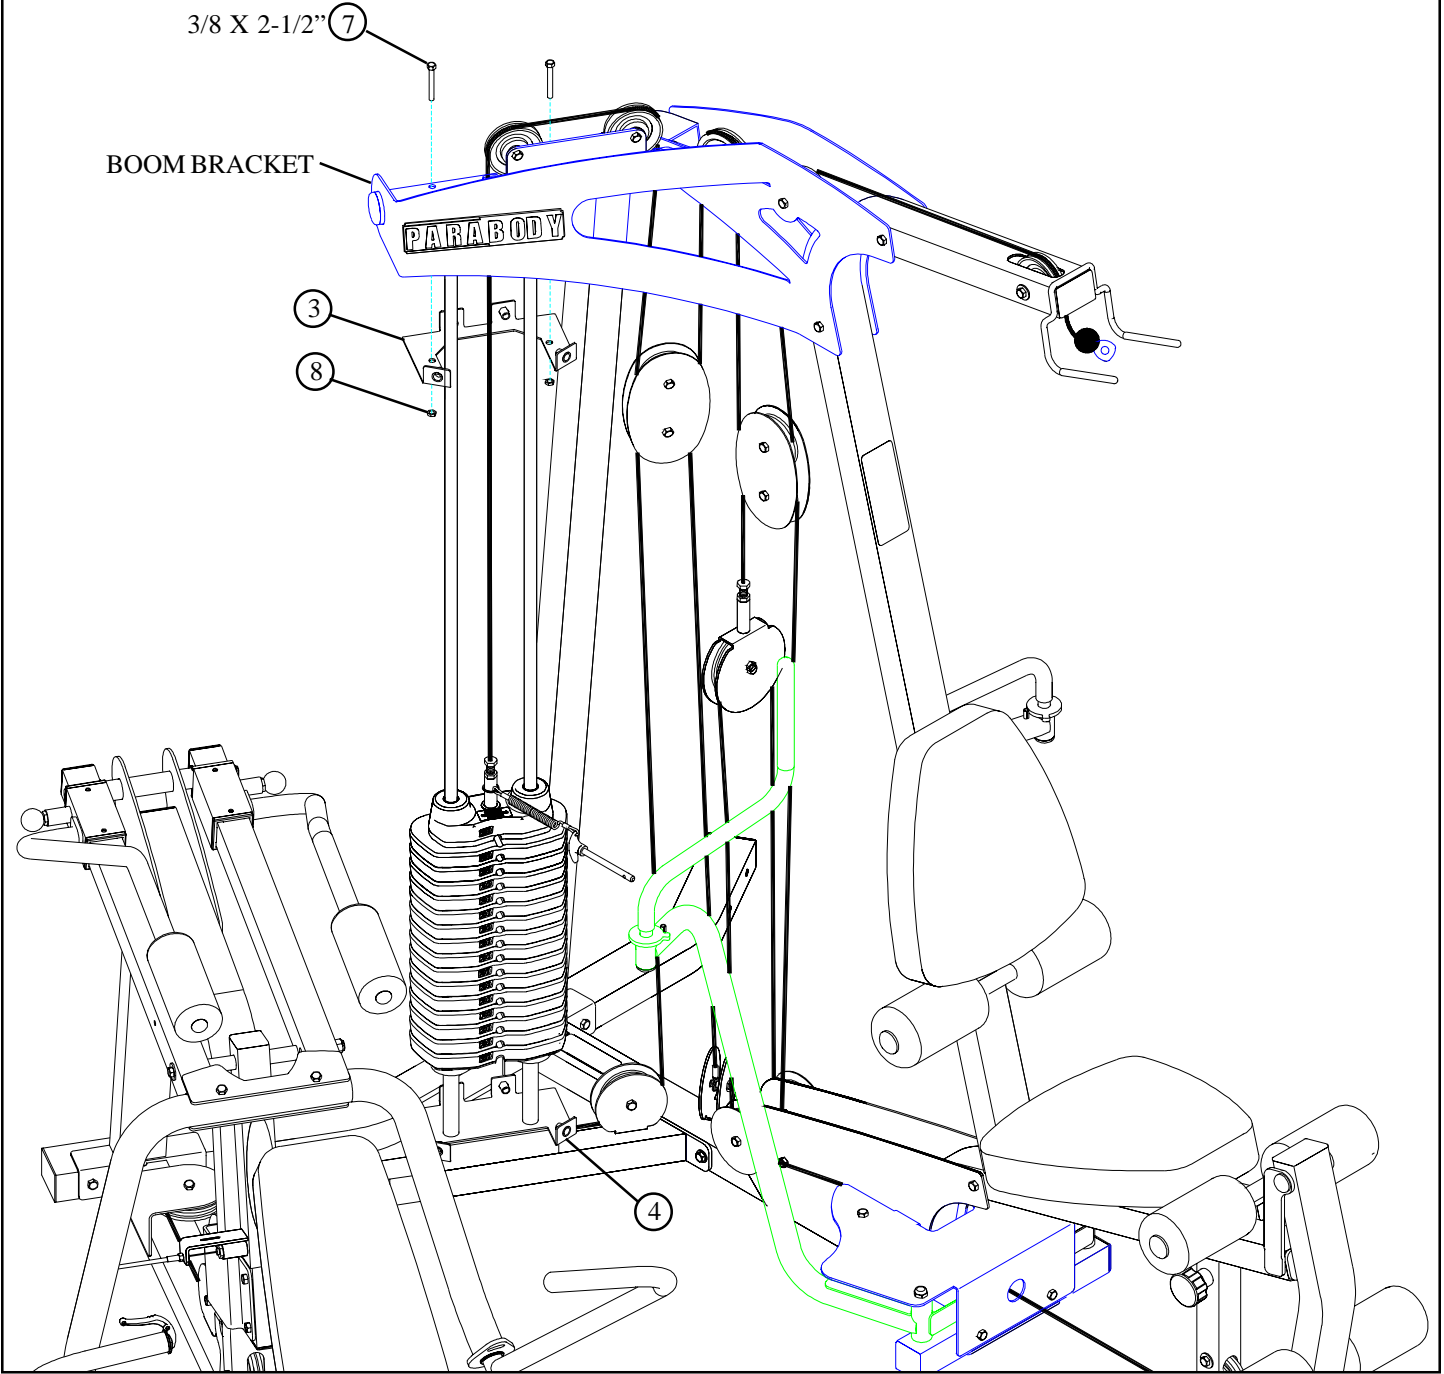

STEP 1:


- **SECURELY** assemble the TOP SHROUD BRACKET (3) to the BOOM BRACKET using two 3/8 X 2-1/2" BOLTS (7) and two 3/8" LOCK NUTS (8) as shown in FIGURE 1. The BOTTOM SHROUD BRACKET (4) was previously inserted under the weight stack in the GYM ASSEMBLY INSTRUCTIONS.

FIGURE 2

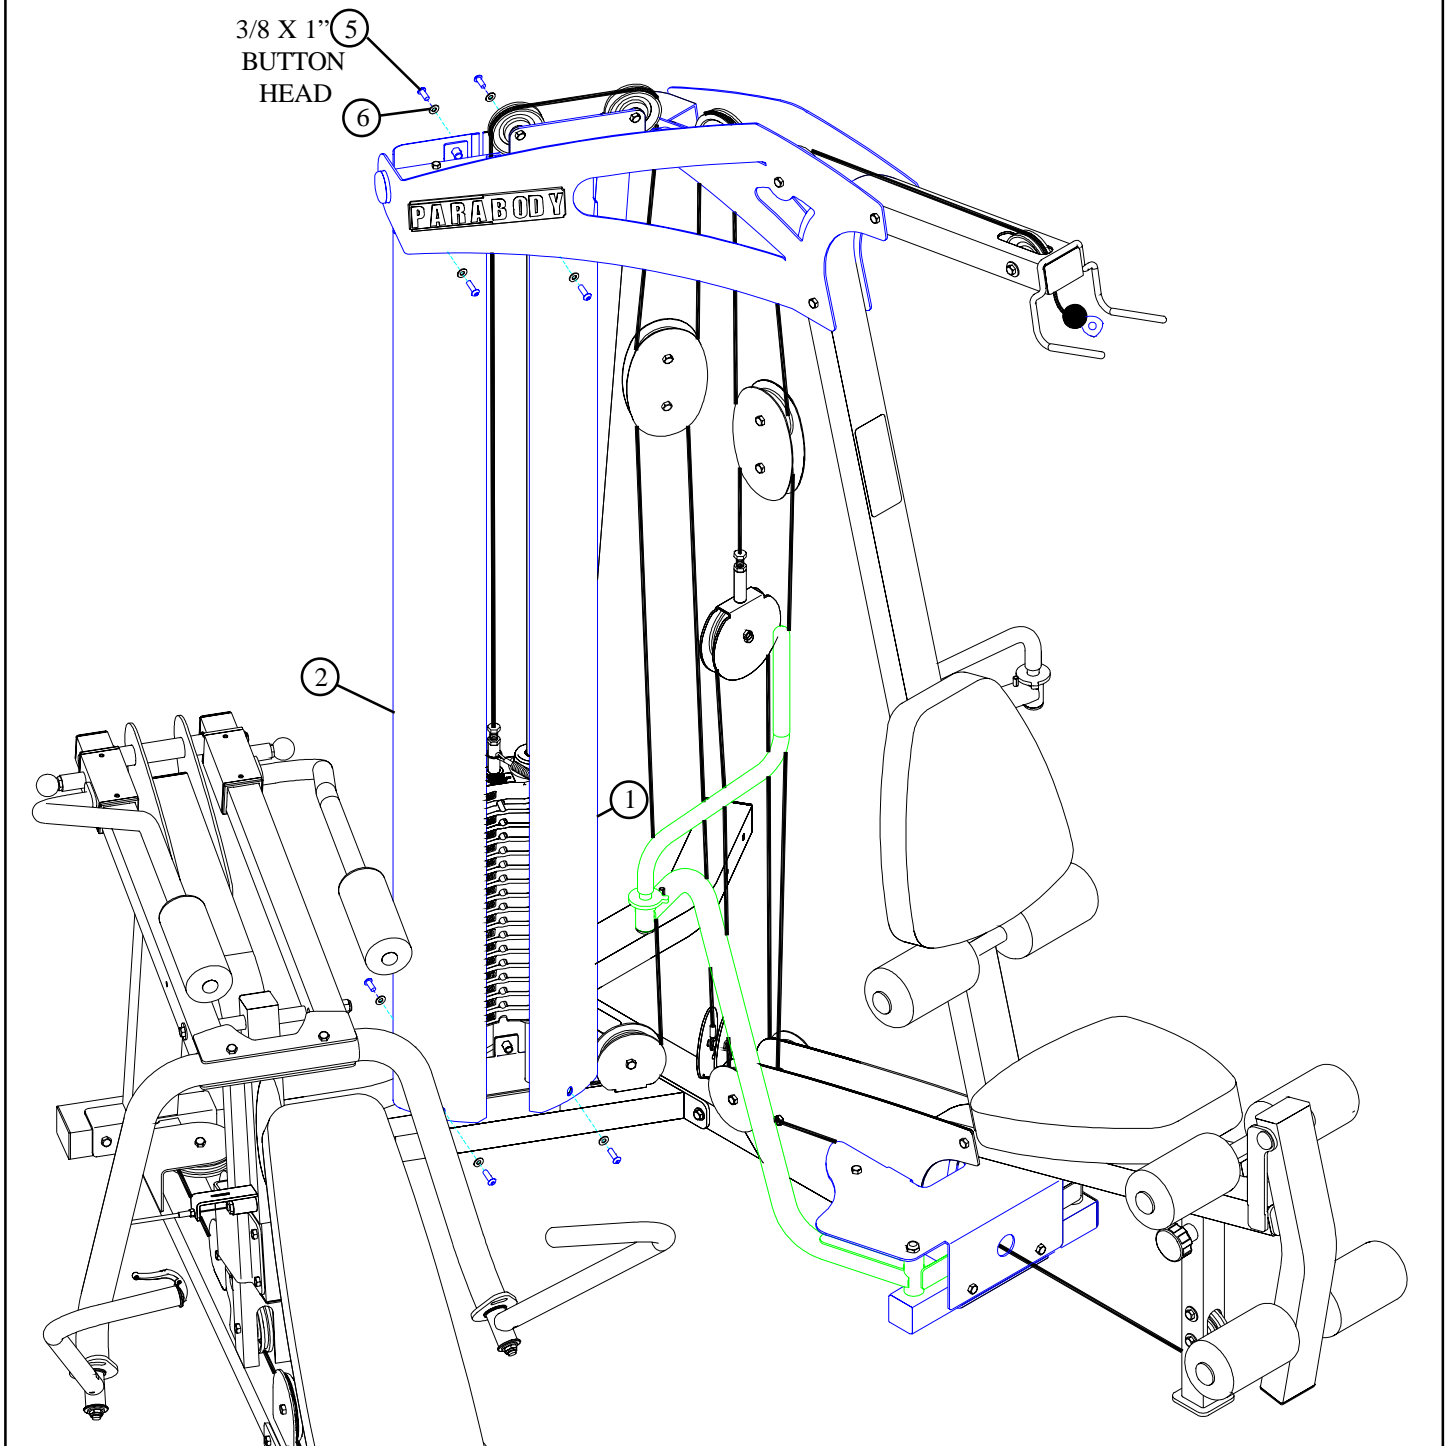

STEP 2:

- **SECURELY** assemble the LEFT SHROUD (1) and RIGHT SHROUD (2) to the TOP (3) and BOTTOM (4) SHROUD BRACKETS using eight 3/8 X 1" BUTTON HEAD BOLTS (5) and eight 3/8" BLACK SAE WASHERS (6) as shown in FIGURE 2. (**NOTE:** Assemble LEFT SHROUD (1) by inserting top of shroud first, then lift up and swing the bottom of shroud into place.)
- If the GS8 SECOND STACK OPTION was purchased, repeat STEPS 1 & 2 to assemble the SHROUDS (1 & 2) to the SECOND STACK.
- This completes the assembly of the WT. STACK SHROUD FOR GS6/GS8.

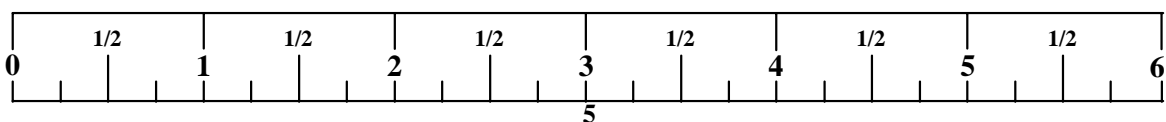

MAINTENANCE

Please note:

- * We recommend cleaning your product (pads and frame) on a regular basis, using warm soapy water. Touch-up paint can be purchased from your ParaBody customer service representative at (800) 328-9714.
- * Inspect equipment daily. Tighten all loose connections and replace worn parts immediately. Failure to do so may result in serious injury.
- * **PLEASE RECORD THE INFORMATION REQUESTED BELOW. IN THE EVENT YOU MAY NEED SERVICE YOU WILL BE ASKED FOR THIS INFORMATION. REMEMBER TO FILL OUT YOUR WARRANTY REGISTRATION CARD AND MAIL BACK.**


MODEL # _____

SERIAL # _____

DATE OF PURCHASE: _____

DEALERS NAME: _____

DEALERS PHONE # _____

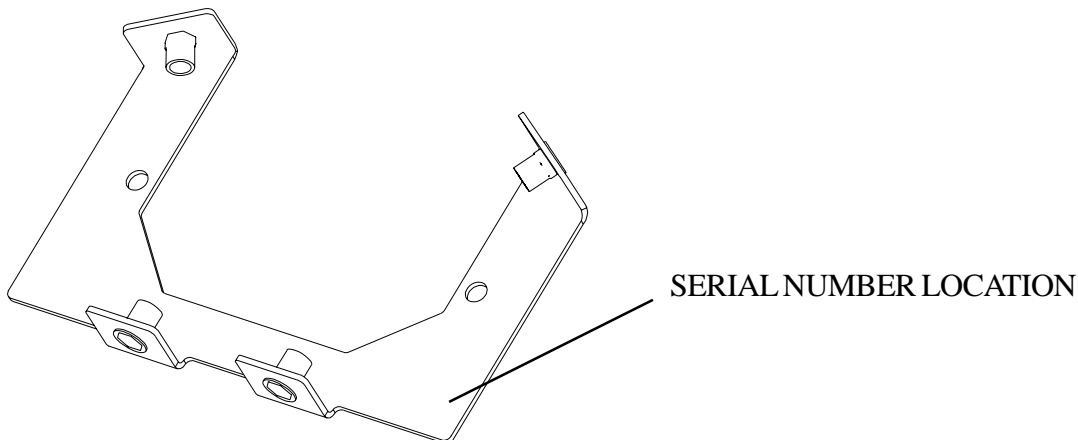

Thank you for purchasing the ParaBody Wt. Stack Shroud for GS6/GS8.

LIMITED WARRANTY

ParaBody extends the following LIMITED WARRANTY to the original owner of the ParaBody products. The Warranty terms apply to IN HOME USE ONLY.

1. **LIMITED WARRANTY ON FRAME AND WELDS.** If the frame of the ParaBody product or a weld should crack or break, it will be repaired or replaced by ParaBody. Terms: Lifetime – for so long as the Customer owns the ParaBody product.
2. **LIMITED WARRANTY ON PARTS.** If the following parts are defective in material or workmanship, ParaBody will supply replacement parts: all bolts, nuts, washers, bearings, bushings, pulleys, thumbscrews, collars, cable retaining clips, adjustable pre-stretch slides, roller pad shafts, allen head bolts, weight selector pin, weight stack shaft, set screws, protector caps, adjustment chain, cotter pin, plunger, spring and knob. Terms: Lifetime – for so long as the Customer owns the ParaBody product.
3. **LIMITED WARRANTY ON CABLES AND UPHOLSTERY.** If the coated cables or upholstery are defective in material or workmanship, ParaBody will repair or replace them, at its option. Terms: Three (3) years.
4. **CONDITIONS AND EXCEPTIONS.** Any product misuse, abuse or alteration, any attempt to repair by a person other than an authorized ParaBody Service Center, any improper assembly, accident, or any other condition resulting from occurrences beyond the control of ParaBody will void this Limited Warranty.
5. **REPLACEMENT AND REPAIR EXPENSES.** ParaBody will provide only replacement parts or repair under this warranty. The Owner is responsible for all other costs. Such costs may include, but are not limited to: a. labor charges for service, removal, repair or reinstallation of the ParaBody product or any component part; b. shipping, delivery, handling and administrative charges for returning parts to ParaBody; and c. all necessary or incidental costs related to installation of the replacement parts.
6. **SHIPPING.** If shipping by the Owners is deemed necessary (in sole discretion of ParaBody), parts should be shipped in their original carton or equivalent packaging, fully insured with shipping charges prepaid. ParaBody will not assume any responsibility for any loss or damage incurred in shipping.
7. **CLAIM PROCEDURES.** If service on your ParaBody product is required during the warranty period, please contact our Customer Service Department at 1-800-328-9714 for instructions regarding returning or replacing parts. Please have available the following information: (i) the dealer's name; (ii) the date of purchase; (iii) the serial # (s) of your product (the serial number location is called out on the final assembly drawing included with your assembly instruction); (iv) a description of the nature of the problem.
8. **OWNER'S RIGHT.** This Limited Warranty gives you specific legal rights. You may also have other rights, which vary depending on local law.
9. **LIMITATION OF IMPLIED WARRANTIES.** All implied warranties, except to the extent prohibited by applicable law, shall have no greater duration than the warranty period set forth above. There are no warranties which extend beyond the description in this Limited Warranty. Because local laws do not allow limitations on how long an implied warranty lasts, the above limitations may not apply to you.
10. **DISCLAIMER.** No other express warranty has been made or will be made on behalf of ParaBody with respect to any ParaBody product or the operation, repair or replacement of any ParaBody product. ParaBody shall not be responsible for injury, loss of use of the ParaBody product, inconvenience, loss or damage to personal property, whether direct or indirect, and incidental or consequential damages, so the above limitation or exclusion may not apply to you.

NOTES:

LIFE FITNESS

14150 Sunfish Lake Blvd. Ramsey Minnesota, 55303 U.S.A.

Tel: 763.323.4500 Fax: 763.323.4797

800.328.9714 (Toll-free within the U.S. and Canada)

www.parabody.com

INTERNATIONAL OFFICES

Life FitnessAtlantic BV

Atlantic Headquarters

Bijdorpplein 25-31

2992 LB Barendrecht

The Netherlands

Phone: (180) 646 666

Fax: (180) 646 703

Life Fitness (UK) Ltd.

Queen Adelaide

Ely, Cambs CB7 4UB

United Kingdom

Phone CSS: (01353) 665507

Fax CSS: (01353) 666719

Life Fitness EUROPE GmbH

Siemensstrasse 3

85716 Unterschleissheim

Germany

Phone: (089) 31 77 51-0

Fax: (089) 31 77 51 99

Life Fitness Benelux N.V.

Bijdorpplein 25-31

2992 LB Barendrecht

The Netherlands

Phone: 31 (180) 64 66 69

Fax: 31 (180) 64 66 99

Life Fitness Italia S.R.L.

Via Elvas 92

39042 Bressanone

Italy

Phone: 39 (472) 835-470

Fax: 39 (472) 833-150

Life Fitness Japan

8/F, Nippon Brunswick Building

5-27-7 Sendagaya

Shibuya-Ku, Tokyo 151-0051

Japan

Phone: 81 (3) 3359-4309

Fax: 81 (3) 3359-4307

Life Fitness Asia Pacific Limited

Room 2610, Miramar Tower

132 Nathan Road, Tsimshatsui

Kowloon, Hong Kong

Phone: (852) 2891-6677

Fax: (852) 2575-6001

Life Fitness Do Brazil

Al. Rio Negro, 433-Predio 2-Sala 2

3º andar (Confab)

Aplhaville-Barueri-Sao Paulo

CEP: 06454-904

Brazil

Phone: 55 (11) 7295-2217

Fax: 55 (11) 7295-2218